

Frequently Asked Questions...

Why did my AAV stop working?



- AAV's are meant to last a lifetime of an RV or home. However, there are times dust, dirt or gunk can get into the AAVs diaphragm, and cause the seal to fail.
- The adapter seals with an O-Ring. If you are getting a sewer gas smell, you could try putting thread tape on the adapter thread & screw AAV back on.

Can I replace my Air Admittance Valve, myself?

- Yes! This is quite easy to do on your own. Select the correct AAV replacement (see below). Insert and screw on your new AAV where the other one has been removed from. Please be sure you are replacing your AAV with the correct part. When in doubt, refer to our website, or give us a call, we would be happy to help!

How do I know what size AAV I need?

- 1-1/4 Inch
- 1-1/2 Inch

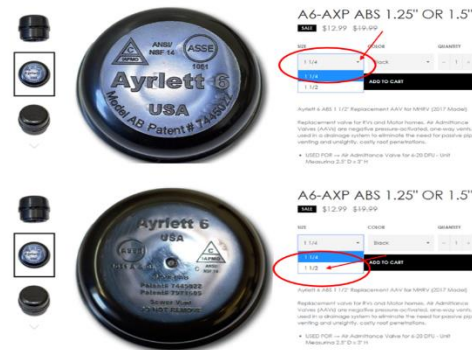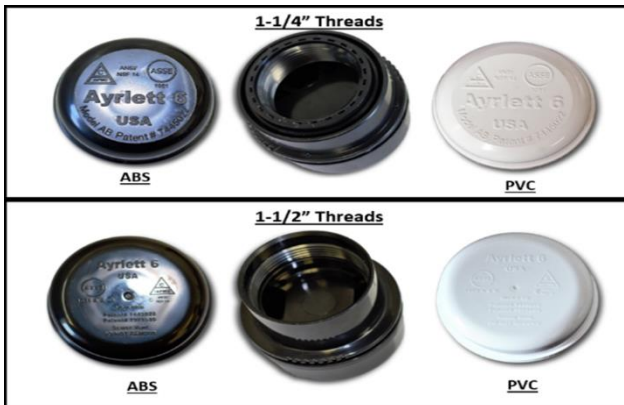

Where can I find a replacement for my Air Admittance Valve (AAV)?

- <https://boldhome.com/products/a6-axp-1-1-4-threads-abs>

